



FLEXX HANDLEBAR BENDS - ADVENTURE

Flexx Handlebar ADV Bend Charts

Near the bottom of the page there's a complete cross reference list of OEM offerings. Please email or call us if you don't see the bend cross reference you are looking for or you need help choosing the correct bend, we're happy to help!

POPULAR BENDS FROM OTHER BRANDS (CROSS REFERENCE)

<u>Model</u>	<u>(A) Sweep</u>	<u>(C) Width</u>	<u>(D) Height</u>	<u>Comparable Flexx Handlebar</u>
CR High	62mm	795mm	95mm	15° Moto
RC	54mm	802mm	99mm	12° Moto
RC High	54mm	802mm	119mm	12° Moto High
Pastrana FMX	55mm	800mm	121mm	12° Moto High
Husqvarna 501/701 (Stock Bar)	40mm	812mm	95mm	10° Adventure
Husqvarna Norden 901	80mm	812mm	121mm	19° Adventure
Africa Twin (Stock Bar)	80mm	812mm	121mm	19° Adventure
Ktm 790/890/990/ 1090/1290/ 1890/1290 (Stock Bar)	80mm	812mm	105mm	19° Adventure
BMW 800/1200 (Stock Bar)	85mm	790mm	105mm	19° Enduro High
Ktm 690 (Stock Bar)	40mm	810mm	95mm	10° Adventure

A. Sweep

Shown in degrees/millimeters

B. Mid-Section


Enduro and Adventure bars have a 7.25" center section.

C. Overall Width

Measured from handle end to handle end.

D. Height

Measured in millimeters. We have three heights, 68mm, 92mm and 116mm.

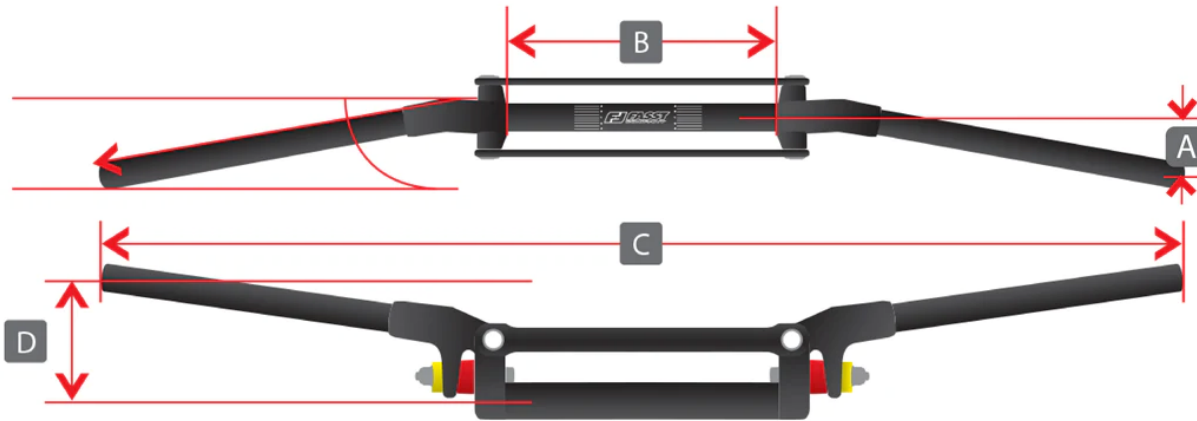

FLEXX HANDLEBAR NOTATIONS AND DEFINITIONS

- Our Adventure bar is built on the narrow Enduro center section shown as measurement (B) with one inch longer handles, providing plenty of room to mount all your controls and accessories. Adventure bends offer 10" of handle room.
- Damper Crossbars will accommodate over the bar steering dampers. Damper Crossbars can be added to any Flexx Handlebar. Submount dampers do not require use of damper crossbars.
- Flexx Handlebar can be used with enduro computers, trip computers, GPS, steering dampers, roll charts, etc., etc. We offer a dash in our store section that will easily accommodate most GPS.

Handlebar Bend Options

<u>10 Degree Bends</u>	<u>(A) Sweep</u>	<u>(C) Width</u>	<u>(D) Height</u>	<u>Part Number</u>
10* Enduro Low	10*/40mm	31.5in/800mm	68mm	FL-1000-10-31
10° Enduro	10° / 40mm	31.3in/788mm	92mm	FL-1001-10-31
10° Enduro High	10° / 40mm	31.3in/788m	116mm	FL-1003-10-31
10° Moto Low	10° / 40mm	32.7in/824mm	68mm	FL-1000-10-32
10° Moto	10° / 40mm	32.25in/819mm	92mm	FL-1001-10-32
10° Moto High	10° / 40mm	<u>32.25in/819mm</u>	116mm	FL-1003-10-32
10° Adventure Low	10° / 40mm	33.7in/855mm	68	FL-1000-10-32.5
10° Adventure Standard	10° / 40mm	33.25in/844mm	92mm	FL-1001-10-32.5
10° Adventure	10° / 40mm	33.25in/844mm	116mm	FL-1004-10-32.5

<u>12 Degree Bends</u>	<u>(A) Sweep</u>	<u>(C) Width</u>	<u>(D) Height</u>	<u>Part Number</u>
12° Enduro Low	12° / 54mm	31.25in/793mm	68mm	FL-1000-12-31
12° Enduro	12° / 54mm	31in/787mm	92mm	FL-1001-12-31
12° Enduro High	12° / 54mm	31in/787mm	116mm	FL-1003-12-31
12° Moto Low	12° / 54mm	32.25in/819mm	68mm	FL-1000-12-32
12° Moto	12° / 54mm	32in/813mm	92mm	FL-1001-12-32
12° Moto High	12° / 54mm	32in/813mm	116mm	FL-1003-12-32
12° Adventure Low	12° / 54mm	33.25in/844mm	68mm	FL-1001-12-32.5
12° Adventure Standard	12° / 54mm	33in/838mm	92mm	FL-1001-12-32.5
12° Adventure	12° / 54mm	33in/838mm	116mm	FL-1004-12-32.5
<u>14 Degree Bends</u>	<u>(A) Sweep</u>	<u>(C) Width</u>	<u>(D) Height</u>	<u>Part Number</u>
14° Enduro Low	14° / 57mm	31in/787mm	68mm	FL-1000-14-31
14° Enduro	14° / 57mm	30.9in/786mm	92mm	FL-1001-14-31
14° Enduro High	14° / 57mm	30.9in/786mm	116mm	FL-1003-14-31
14° Moto Low	14° / 57mm	32in/813mm	68mm	FL-1000-14-32
14° Moto	14° / 57mm	31.8in/808mm	92mm	FL-1001-14-32
14° Moto High	14° / 57mm	31.8in/808mm	116mm	FL-1003-14-32
14° Adventure Low	14° / 57mm	33in/838mm	68mm	FL-1000-14-32.5
14° Adventure Standard	14° / 57mm	32.8in/833mm	92mm	FL-1001-14-32.5
14° Adventure	14° / 57mm	32.8in/833mm	116mm	FL-1004-14-32.5
<u>15 Degree Bends</u>	<u>(A) Sweep</u>	<u>(C) Width</u>	<u>(D) Height</u>	<u>Part Number</u>
15° Enduro Low	15° / 62mm	30.9in/785mm	68mm	FL-1000-15-31

15° Enduro	15° / 62mm	30.8in/783mm	92mm	FL-1001-15-31
15° Enduro High	15° / 62mm	30.8in/783mm	116mm	FL-1003-15-31
15° Moto Low	15° / 62mm	32in/813mm	68mm	FL-1000-15-32
15° Moto	15° / 62mm	31.8in/808mm	92mm	FL-1001-15-32
15° Moto High	15° / 62mm	31.8in/808mm	116mm	FL-1003-15-32
15° Adventure Low	15° / 62mm	33.18in/843mm	68mm	FL-100015-32.5
15° Adventure Standare	15° / 62mm	32.8in/833mm	92mm	FL-1001-15-32.5
15° Adventure	15° / 62mm	32.5in/833mm	116mm	FL-1004-15-32.5
<u>19 Degree Bends</u>	<u>(A) Sweep</u>	<u>(C) Width</u>	<u>(D) Height</u>	<u>Part Number</u>
19° Enduro Low	19° / 80mm	30.5in/775mm	68mm	FL-1000-19-31
19° Enduro	19° / 80mm	30.3in/770mm	92mm	FL-1001-19-31
19° Enduro High	19° / 80mm	30.3in/770mm	116mm	FL-1003-19-31
19° Moto Low	19° / 80mm	31.5inmm/800m	68mm	FL-1000-19-32
19° Moto	19° / 80mm	31.3in/795mm	92mm	FL-1001-19-32
19° Moto High	19° / 80mm	31.3in/795mm	116mm	FL-1003-19-32
19° Adventure/Super Tenere Low	19° / 80mm	32.5in/825mm	68mm	FL-1000-19-32.5
19° Adventure/Super Tenere Standard	19° / 80mm	32.3in/820mm	92mm	FL-1001-19-32.5
19° Adventure/Super Tenere	19° / 80mm	32.5in/820mm	116mm	FL-1004-19-32.5

OEM Cross Reference

<u>Manufacturer /</u> <u>Model BMW</u>	<u>Comparable Flexx</u> <u>Handlebar</u>	<u>Notes</u>
06-11 800/1200	19° Enduro High	Our 19° Enduro or 19° Enduro High usually work best on the BMW.
2011+ 800/1200	19° Adventure High	Our 19° Adventure or 19° Adventure High usually work best on the BMW.
<u>Honda</u> Africa Twin	19° Adventure	Our 15° and 19° Adventure Bends work best on the AT
<u>KTM</u> KTM 1090/1190/1290	19° Adventure	603.02.101.000/ 603.02.001.000
KTM 690/Husq 701	10° Adventure Low	780.02.001.000/17 We recommend our Adventure bars on the 690/701 as it offers more control mounting room.