
ASP Group s.r.o. Staropizenecká 290 326 00 Letkov Czech Republic Tel: +420 378 21 21 21



info@aspgroup.cz www.aspgroup.eu

UNIVERSAL ASSEMBLY INSTRUCTION

ATV UNIVERSAL MOUNTING KIT

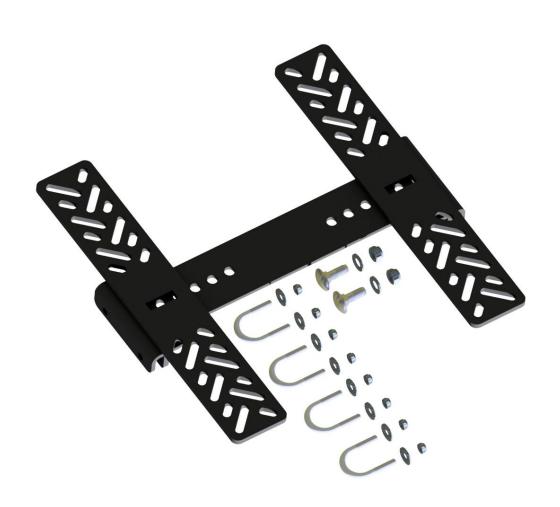

FIXING PLATES AND CLAMPS SETUP

- 1. Before assembly, prepare the machine so that there is good access to the rolling chassis.
- 2. Best way is to place UNIVERSAL ADAPTER behind front wheel axle for good dispersion of possible impacts to the chassis of the machine.
- 3. When skid plates already installed on ATV, find suitable holes in skid plates for universal adapter assembly or remove skid plates or adapt skid plates by adding additional holes in order to install universal adapter fixing clamps to ATV rolling chassis.
- 4. Universal adapter can be mounted and used on both tubular and square type rolling chassis frames.

Unpack and prepare the ATV universal adapter kit. Prepare wrench or socket key M12 na M8.



1. FIXING CLAMPS SETUP

Set the fixing clamps on main rolling chassis tubing. When skid plates assembled find the holes as per Image. # 1 and where necessary adapt skid plates with holes for fixing clamps or disassemble the skid plate.





Image #. 1: Position of 1st pair of clamps

Image #. 1: Top view of rear fixing clamps

2. Main plates mounting

Place the M12x35 screws in main plates rectangular holes and attach the plates using the clamps to the rolling chassis tubes. Leave the nuts loose.



Image #. 3: Mounting kit main plates

3. Connecting plate assembly

Assemble connecting plate to the kit main plates. Now tight well all the nuts.



Image #. 4: Connecting plate position