




INSTALLATION INSTRUCTIONS

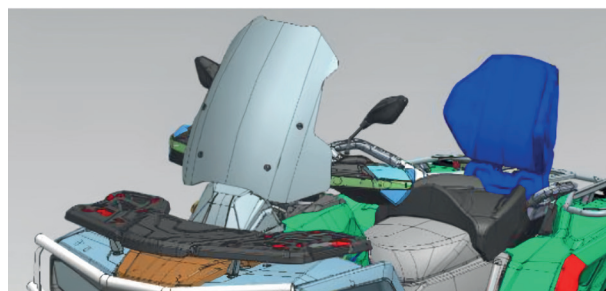


ATV WINDSHIELD FOR LINHAI LANDFORCE 550/650/1000

Product Code: **WINDS-LF01**

PARTS LIST

ITEM	PART NAME	QTY.
1	WINDSHIELD ASSY	1
2	FRONT WINDSHIELD	1
3	RH WINDSHIELD BRACKET	1
4	LH WINDSHIELD BRACKET	1
5	HANDLEBAR UPPER PRESS COVER	1

ITEM	PART NAME	QTY.
6	STEERING SHAFT DECO COVER	1
7	SCREW M6X22	4
8	RUBBER SLEEVE LINER	4
9	RUBBER BUSHING	4
10	NUT M6	4
11	INNER HEX SCREW M8X50	4

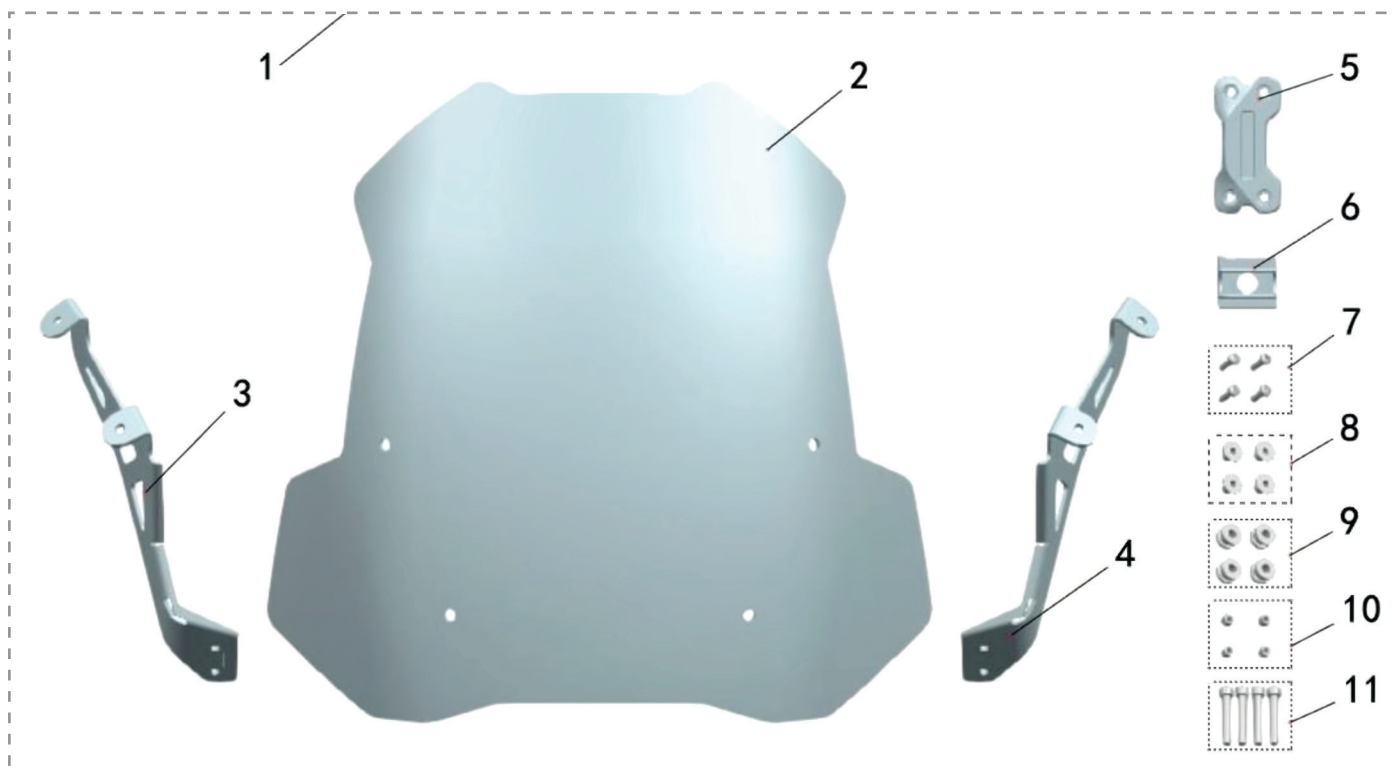

TOOL LIST

ITEM	PART NAME	QTY.
1	PROTECTIVE GLOVES	1
2	10mm WRENCH	1
3	4mm ALLEN WRENCH	1
4	6mm ALLEN WRENCH	1


Official distributor:




ASP Group s.r.o.
Staroplzenecka 290
326 00 Letkov
Czech Republic




www.aspgroup.eu

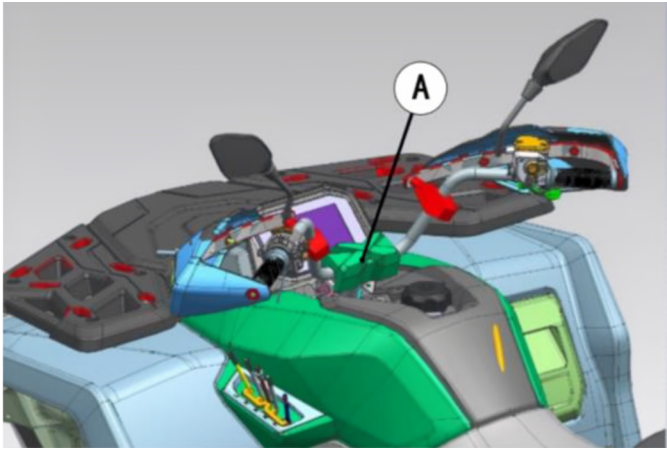


1. Pull up and remove the handlebar upper guard (A).

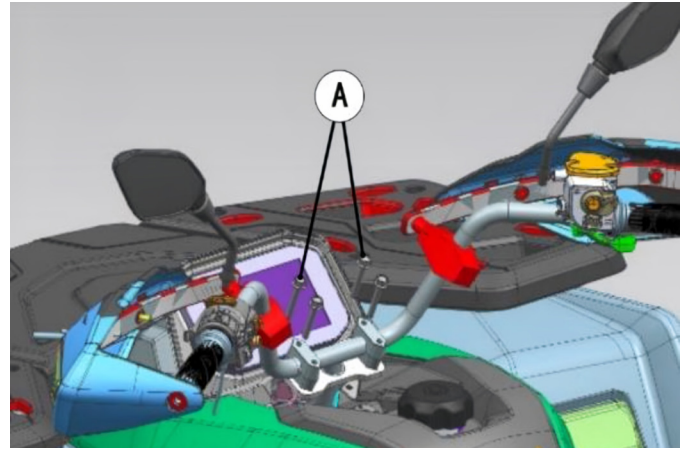


2. Remove four bolts M8×55 (A).
NOTE: These screws will not be used.

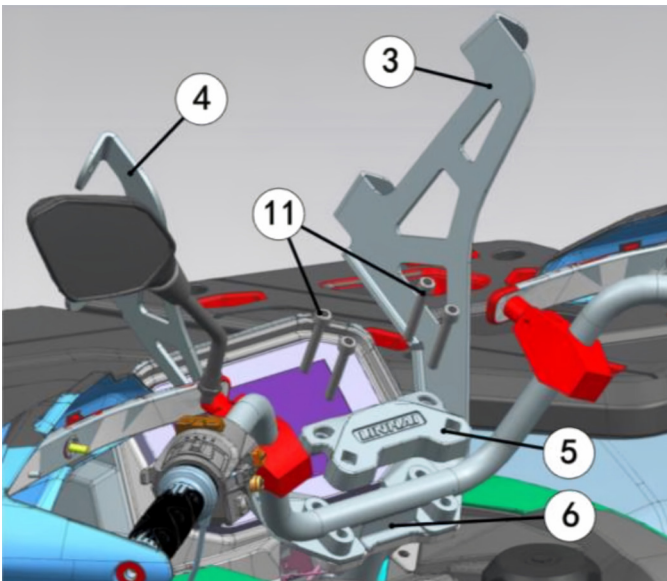


3. Place the steering shaft deco cover (5) and the LH & RH windshield bracket (3&4) under the handlebar (6) as shown, align the thread holes, then install and torque the M8×50 screws (11).

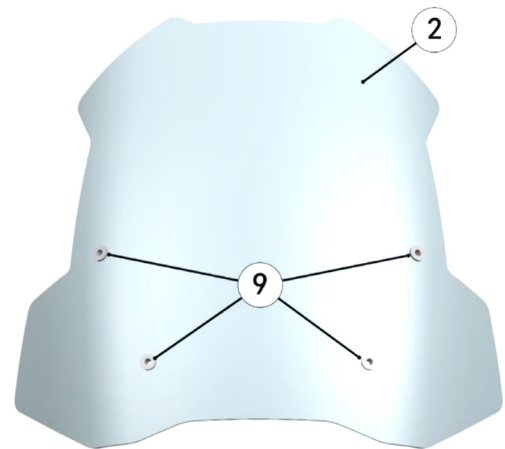

4. Install the rubber bushings (9) into the corresponding holes on the front windshield (2).

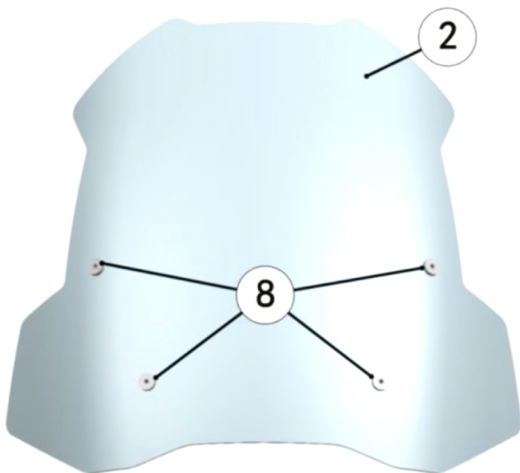

5. Install the rubber sleeve liner (8) into the corresponding rubber bushing holes on the front windshield (2).

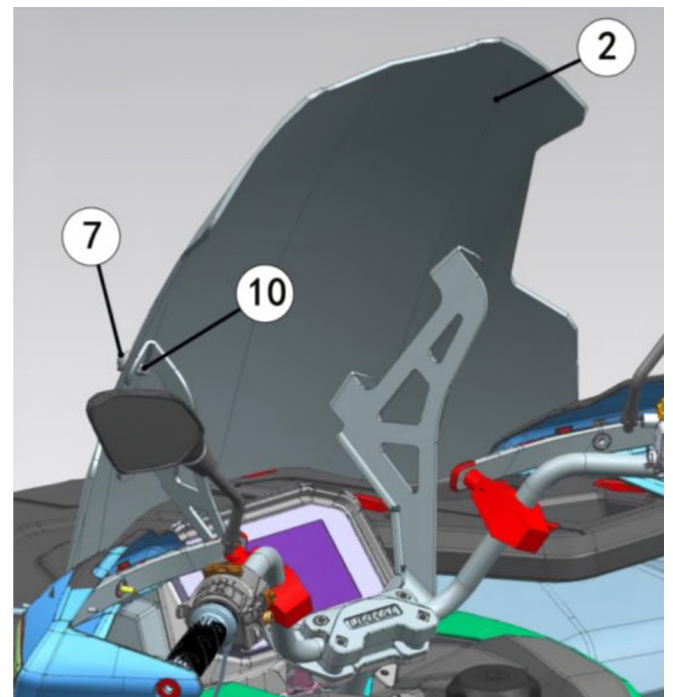

6. Align the holes on the front windshield (2) to the windshield brackets, then install the supplied M6×22 screws (7) and nuts (10). Tighten the fasteners sufficiently, using caution not to over tighten.